



## CONNECTION

1. Turn off the power supply.
2. Pull out the central button.
3. Remove the inner tile by gently squeezing in the gap between itself and the plastic frame at the side wings level.
4. Connect the cables as shown at the connecting graphics below.

After safely connecting and placing back to the wall, turn on the power supply, turn the main button all the way to the left at the minimum point and by inserting a tester screwdriver into the hole above the main switch, adjust the lower step of brightness according to the lamp type and/or your desire.

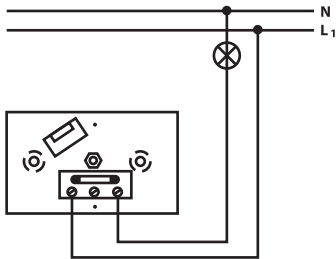

(Graphic 1) NORMAL SWITCH

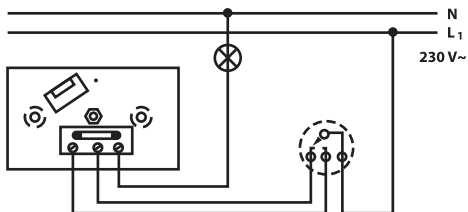

(Graphic 2) ALLER RETOUR SWITCH


Please use this model  
**EXCLUSIVELY FOR LED LAMPS**  
Do not mix different manufacturer's lamps  
or types and models

## FUSE REPLACEMENT

**ATTENTION!** To replace the fuse as well as for any intervention you must **turn off the power supply**.



## DIMMER 200W LED (IN WALL)

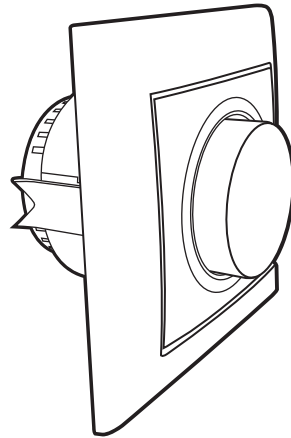

### TECHNICAL DETAILS

#### - MODEL 116 -

(For LED lamps exclusively)

SUPPLY VOLTAGE	230V
LOAD POWER	0 - 200W LED
FUSE	1A / 250V
SWITCH	PUSH - PUSH

Magic Electronic reserves all rights to modify any technical details to ameliorate the dimmer

**SOLOMON**  
Distributed by Solomon Group S.A.  
[www.solomongroup.gr](http://www.solomongroup.gr)

   
MADE IN GREECE