

CONNECTION


1. Turn off the power supply.
2. Pull out the central button.
3. Remove the inner tile by gently squeezing in the gap between itself and the plastic frame at the side wings level.
4. Connect the cables as shown at the connecting graphics below.
5. For transformers, please connect the primary current instead of the lamp.

Do not use this dimmer for CFL lamps.


After safely connecting and placing back to the wall, turn on the power supply, turn the main button all the way to the left at the minimum point and by inserting a tester screwdriver into the hole above the main switch, adjust the lower step of brightness according to the lamp type and/or your desire.

TECHNICAL DETAILS (For LED lamps exclusively)	
SUPPLY VOLTAGE	230V
LOAD POWER	0 - 1000W LED
FUSE	5A / 250V
SWITCH	PUSH - PUSH

Magic Electronic reserves all rights to modify any technical details to ameliorate the dimmer

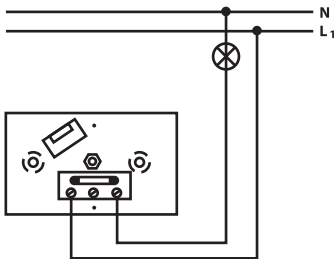

(Graphic 1) NORMAL SWITCH


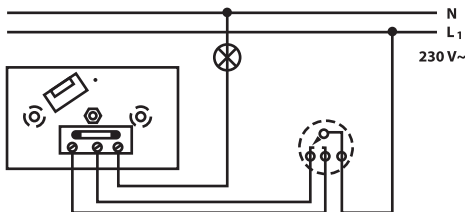


(Graphic 2) ALLER RETOUR SWITCH



MAGIC
ELECTRONIC

ARMON SWITCH
DIMMER LED 1000W MULTI
(IN WALL)

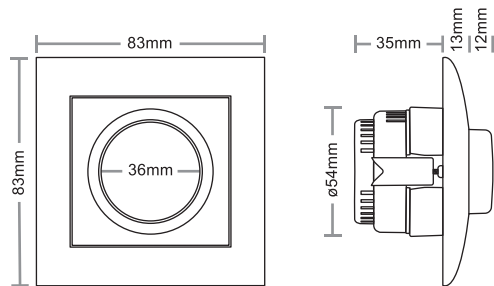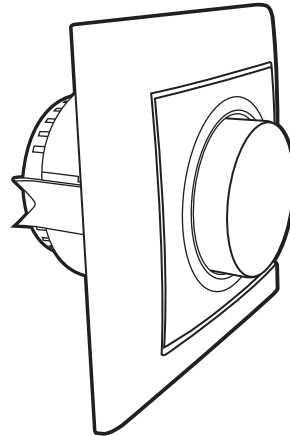

Please use this model
EXCLUSIVELY FOR LED LAMPS
Do not mix different manufacturer's lamps
or types and models

FUSE REPLACEMENT

ATTENTION! To replace the fuse as well as for any intervention you must **turn off the power supply.**

SOLOMON

Distributed by Solomon Group S.A.
www.solomongroup.gr



MADE IN GREECE